

# Greenup Waterproof / 防水LED支架灯

WT118C

Mounting instruction/ 安装说明

444170096971



$t_a 25^{\circ}\text{C}$

**IP  
65**




**IK  
06**

220-240~  
50 /60 Hz

Type 型号描述	Ptyp (W) 功率	Dimension 尺寸				CCT 色温	kg
		A (mm)	B (mm)	C (mm)	D (mm)		
WT118C LED45 PSU LI 500	46	70	50	1450	1000	NW (4000K) CW (6500K)	1.2
WT118C LED36 PSU LI 200	36	70	50	1168	900		0.9
WT118C LED18 PSU LI 200	20	70	50	1168	900		0.9
WT118C LED18 PSU L600	21	70	50	604	400		0.5
WT118C LED9 PSU L600	11	70	50	604	400		0.5
WT118C LED45 PSD LI 500	46	70	50	1450	1000		1.3
WT118C LED36 PSD LI 200	36	70	50	1168	900		1.1
WT118C LED18 PSD LI 200	20	70	50	1168	900		1.1
WT118C LED18 PSD L600	21	70	50	604	400		0.8
WT118C LED9 PSD L600	11	70	50	604	400		0.8

PSU: Non-dimming Type/ 非调光型号  
PSD: Dimming Type/ 可调光型号





Suspension Accessory/ 悬吊附件: WT118Z MB

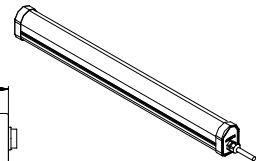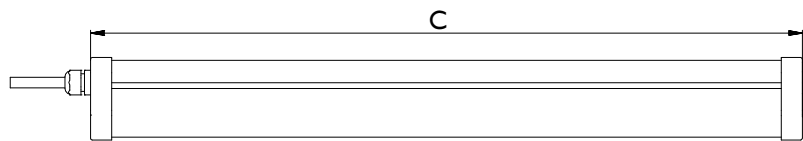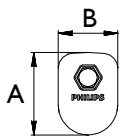

- The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements  
灯具应由有资格的电工安装，接线要符合IEE 电气标准或国家标准。
- Do not switch on before complete installation.  
接线过程中，切勿通电。
- The luminaire is suitable for direct mounting or normally flammable material.  
灯具适合于直接安装在普通可燃材料表面。
- Power cord "Z" type connection. The luminaire shall be scrapped when cable broken.  
灯具电源线使用Z型连接，电源线不可更换，损坏则灯具报废。
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced  
光源不可替换，灯具寿命终了应更换整灯。
- Do not apply to high corrosive gas situation.  
本灯具不适用于高腐蚀性气体的场合。



# PHILIPS

**A1** Ceiling Mounting  
吸顶安装

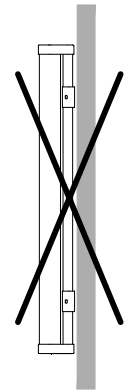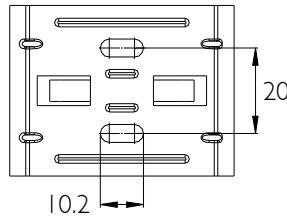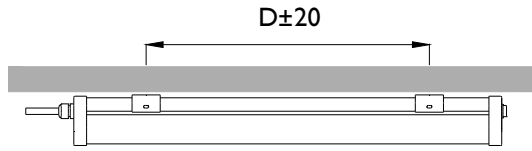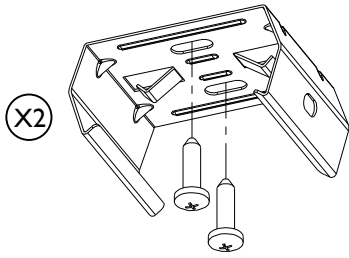


Do not mounting vertically  
请勿垂直安装


**B1** Suspension Mounting  
悬吊安装

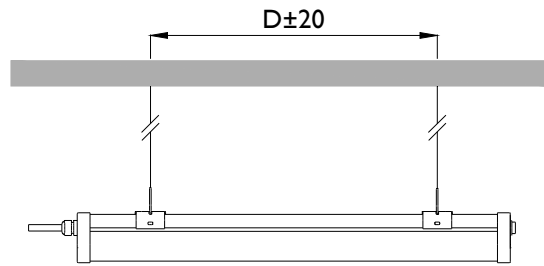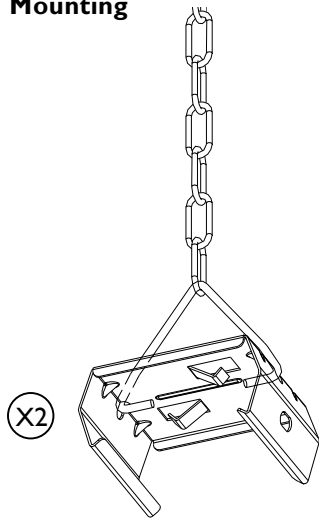

Suspension Accessory  
悬吊附件包括

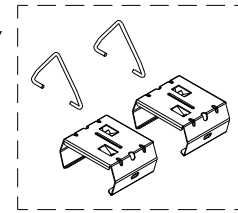

**2**

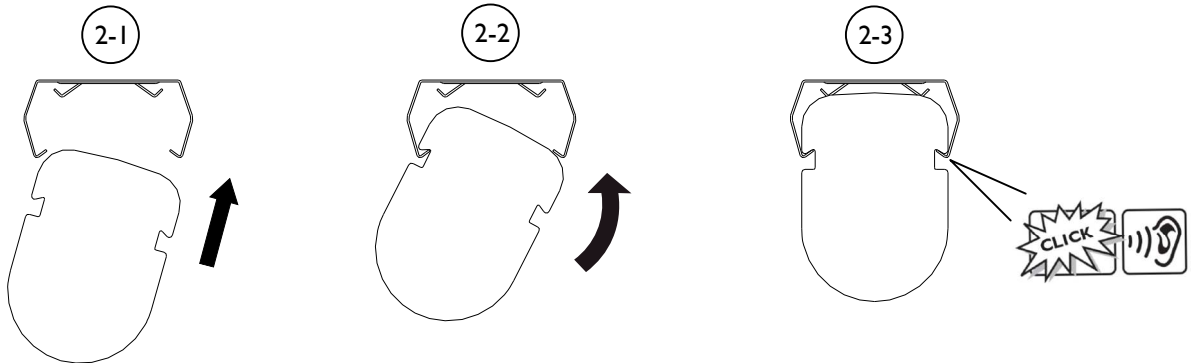



**3** Wiring  
接线

The IP rating of cable connector or junction box shall be IP65 or above. (not provided by Philips)  
请使用IP65及以上的电线连接器或接线盒。  
(客户自行购买)

Luminaire Cable/ 灯具出线:

602451EC57 3x1.0mm<sup>2</sup>

602451EC57 2x1.0mm<sup>2</sup> (Signal cable PSD only/ 信号线仅PSD型号)

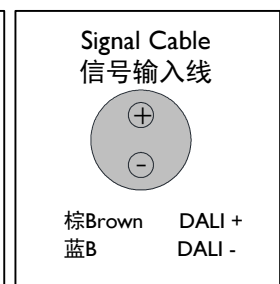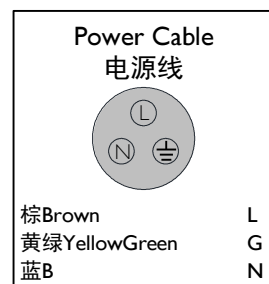

(PSD only/ 仅PSD型号)